



4. TO MAKE ZONE-1 INSTANT: -----1. Press "INSTANT" button.  
2. Press "STAY" button.  
3. Enter your four digit code.

*NOTE: Disarming automatically reactivates the time delay.*

5. TO BYPASS ANY ZONE: -----1. System must be disarmed.  
2. Press "BYPASS" button.  
3. Enter your four digit code.  
4. Press the zone number of the zone to be bypassed.  
5. Repeat steps 2, 3, & 4 to remove a bypassed zone.

*NOTE: Once armed, disarming automatically removes bypass.*

**C. PANIC BUTTONS:**

1. TO OPERATE PANIC: -----1. Press "\*" and "#" keys simultaneously.  
2. Enter your code to silence the siren.

**D. FIRE SYSTEMS:**

1. The fire system is activated automatically.
2. Press "7" and "9" to manually activate the system.
3. If the smoke detectors are set off accidentally, enter your code to silence them.

**E. WHAT TO DO IF THERE IS A FALSE ALARM:**

1. Burglar Alarm: A) Stay calm and go to the nearest keypad. Enter your code to silence the siren.  
B) Once the alarm has gone off, you must enter your code a second time to erase the alarm memory and reset the system. The system cannot be armed again until this is done.
2. Panic Alarm: Enter your code to silence the siren.
3. Fire Alarm: Enter your code to silence the siren.
4. If the monitoring company calls, give them your name and abort code.

**F. PROGRAMMING ARM/DISARM CODES:**

- NOTE: A) The system must be disarmed, it doesn't matter if a zone is opened.  
B) A total of 6 user codes may be selected.  
C) Each code contains 4 numbers.*

1. STEPS: 1. Press the "CODE" key.  
2. Enter the user 1 code (master code).  
3. Enter the user number of the code to be changed or deleted. (1 through 6)  
A) Enter 4 digits to make a new user code.  
B) Press "\*" to delete an existing user code.
4. Next, arm/disarm the system with the new code to make sure it works. If the system can be armed/disarmed with the new code then you did it correctly and you are done.

If you have any questions, please call 303-698-2330.