

7212 & ↻
Bosch 7412

Basic Commands

Battery: 12 volt rechargeable Gel-Cell inside main panel
Arm Away: Code + enter (or command 1)
Arm Stay: Command + 3
Disarm: Code + enter
Instant Arm: Command + 2
Reset System: Code + Escape
Reset Smokes: Comand + 4 + 7
Door Chime: Command + 6
Bypass: Command + 1, command + 0, enter zone to be bypassed + enter + enter
Phone Test: Command + 4 + 1
AC Power Light: On = normal, flashing = power failure
Force Arm: Code, enter (push enter several times until system arms)

Codes:

↓
Add code: Command ⁵⁶55, master code, enter, user number, enter, new code⁴², enter, enter, next until "add level", enter, "yes" or "next" for authority levels (about 8-9 of them), until keypad shows "passcode added." ←
Delete Code: Command 53, master code, user number, enter, enter
Change Code: Command 55, old code, enter, new code, enter, new code