

## First Alert 1670C

ARMING: ENTER COMBINATION, THEN PRESS 2 (AWAY)

ARMING PERIMETER ONLY: (SYSTEM HAS CUSTOMIZABLE STAY MODES THAT MANY NOT ALWAYS BE PROGRAMMED IN)

DISARMING: ENTER COMBINATION, THEN PRESS 1 (OFF)

RESETTING AFTER BURGLAR ALARM: ENTER COMBINATION, THEN PRESS 1 (OFF)

RESETTING AFTER FIRE ALARM: ENTER COMBINATION, THEN PRESS 1 (OFF)

CHANGE COMBINATON: ENTER MASTER COMBINATION, PRESS 8 (CODE), ENTER USER NUMBER (TRIPLE DIGIT), ENTER COMBINATION, ENTER COMBINATION AGAIN, A CHIME WILL SOUND WHEN COMBINATION IS CHANGED

ADD COMBINATION: ENTER MASTER COMBINATION, PRESS 8 (CODE), ENTER USER NUMBER (TRIPLE DIGIT), ENTER COMBINATION, A CHIME WILL SOUND WHEN COMBINATION IS CHANGED

DELETE COMBINATION: ENTER MASTER COMBINATION, PRESS 8 (CODE), ENTER USER NUMBER (TRIPLE DIGIT), ENTER MASTER CODE AGAIN, PRESS 1 FOR YES OR 2 FOR NO, A CHIME WILL SOUND WHEN COMBINATION IS DELETED

CHANGING MASTER COMBINATION: ENTER OLD COMBINATION,

PRESS 8 (CODE), ENTER THE USER NUMBER OF 001, ENTER NEW COMBINATION, ENTER NEW COMBINATION \*\* THE MASTER CODE ON AREA 1 IS ALWAYS USER 001 & USER 002 FOR AREA 2 \*\*

FORCE ARM: CONTACT TECHNICIAN

BYPASSING: ENTER COMBINATION, PRESS 6 (BYPASS), ENTER THE ZONE NUMBER YOU WANT TO BYPASS (THIS IS TRIPLE DIGIT), WAIT FOR KEYPAD TO DISPLAY BYPASSED ZONE, ENTER COMBINATION, PRESS 2 (AWAY) OR 3 (STAY)

TESTING DEVICES: ENTER COMBINATION, PRESS 5 (TEST), KEYPAD WILL BEEP EVERY 3 MINUTES, WHEN YOU TRIP DEVICE KEYPAD WILL SOUND, ENTER COMBINATION, PRESS 1 (OFF) WHEN DONE TESTING

TESTING COMMUNICATION: Code + 5 + 1

AC FAILURE: POWER FAILURE WILL NOT DISPLAY ON THE KEYPAD